




MusicClip 8110

i.Tech Bluetooth Stereo Headset
www.itechdynamic.com

Quick Start Guide

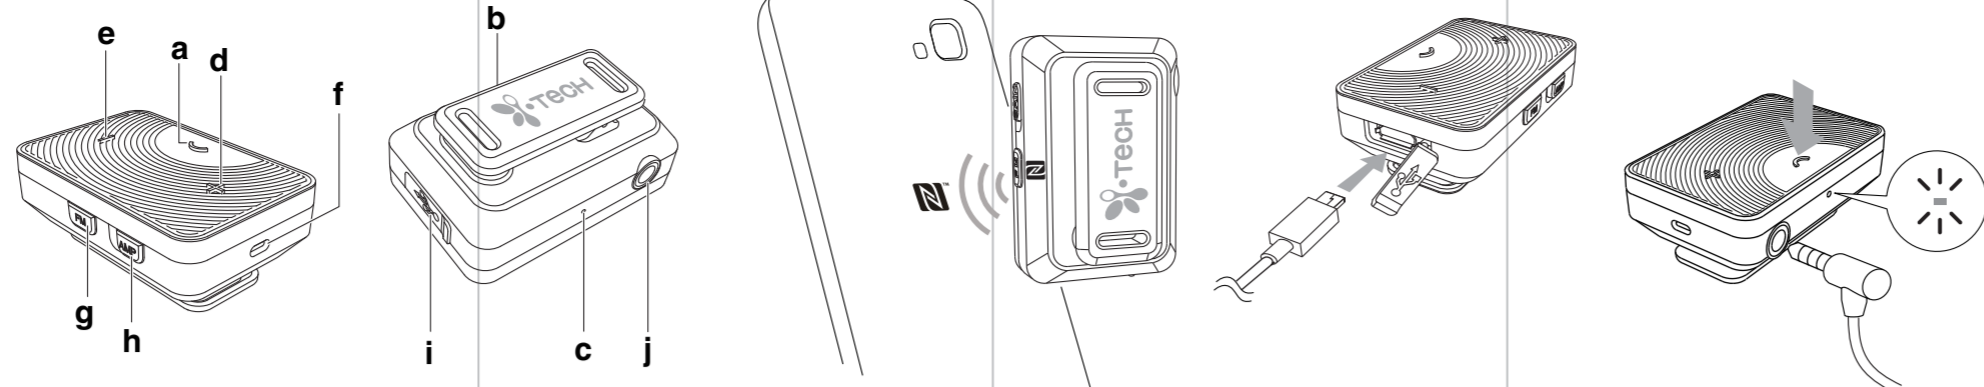


Version 5.0
CCAF 16LP0060T5

All features, functionality and other product specifications, as well as the information contained in this guide, are based upon the latest available information and believed to be accurate at the time of printing. i.Tech reserves the right to change or modify any information or specifications without notice or obligation. The latest version of this guide can be obtained from www.itechdynamic.com. The images in this guide are for reference only.

「輕型設計認證合格之低功耗射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。」
「低功耗射頻電機之使用不得影響飛機航空安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前項合法通信，指依電信法規定作業之無線電通信。低功耗射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。」

i.Tech The Stylized i.Tech logos are registered trademarks.
Bluetooth Bluetooth is a registered trademark.

Dispose of the packaging and this product in accordance with the latest provisions.
Type: Bt110 Printed in China

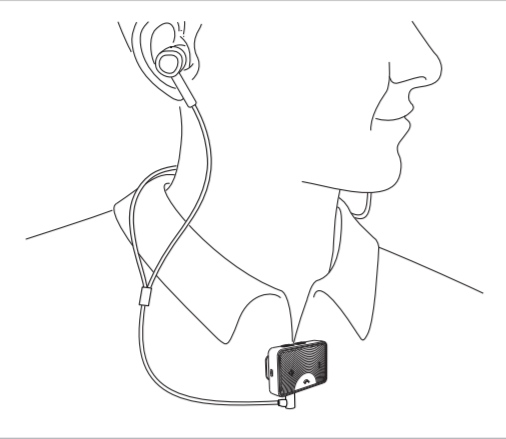

- ### 1. About your MusicClip 8110
- a. Multi-function Button (MFB)**
 - Power On / Off
 - Pair with mobile phone
 - Answer / End a call
 - Play / Pause Music
 - Last Number Redial
 - b. NFC**
 - c. Status Indicator**
 - d. Volume Up (+)**
 - Adjust Volume Up
 - Reject / Transfer a call
 - FM Radio Scan Up
 - Forward
- e. Volume Down (-)**
 - Assign Volume Down
 - FM Radio Scan Down
 - Backward
 - f. Built-in Microphone**
 - g. FM Button**
 - h. FM Radio On / Off**
 - Assign FM Preset Station
 - Retrieve FM Preset Station
 - Voice Dialing
 - i. Charging Socket**
 - j. 3.5mm Audio Socket**

- ### 2. Charging Your Headset
- The headset comes with a built-in rechargeable battery. Prior to using the headset for the first time, it is recommended to fully charge the battery.
- Insert the charger's plug into the headset's USB charging socket and plug the mains charger to an AC wall outlet or plug to the PC/notebook. Use only the supplied charger / USB charging cable to charge the headset.
- | Headset Status | Status Indicator Light |
|----------------|--|
| Low battery | Flash red every minute with voice prompt "Battery Low" |
| Charging | Solid red |
| Fully charged | Off |
- 2 hours are required to fully charge the headset.
* Warning: It is recommended not to use the headset while it is connected to the charger.

- ### 3. Pairing Your Headset with a Bluetooth Device
- 1) Ensure the headset is off.
 - 2) To activate the pairing mode, press and hold the headset's MFB for 8 seconds without releasing your finger until its status indicator flashes blue and red alternately.
 - 3) Activate your mobile phone's Bluetooth, search Bluetooth devices, select "MusicClip 8110" and enter the pass code "0000". When the pairing is completed, the headset's status indicator will flash blue 3 times with "Pairing Successful" voice prompt if the voice prompt language has been configured with English.

With Near Field Communication (NFC), you can pair and connect your MusicClip 8110 to your compatible NFC device easily.

- 1) Switch your device NFC feature on.
- 2) Touch the NFC Mark of your headset with the NFC area of your device. Then the headset connects to the device automatically.

If the device does not support NFC, pair the headset manually.

- ### 5. Basic Operation
- | Function | Button | Alert Tone / Voice Prompt | Status Indicator |
|---------------------|------------------------------------|---------------------------|-----------------------------|
| Power on | Press & hold the MFB for 4 seconds | Power on | Flashing Blue light 3 times |
| Power off | Press & hold the MFB for 4 seconds | Power off | Red light for 2 seconds |
| Answer / End a call | Press the MFB once | -- | -- |
| Last number redial | Double click MFB | Redialing | -- |

Function	Button	Alert Tone / Voice Prompt	Status Indicator
Volume up	Short press "+" button	--	--
Volume down	Short press "-" button	--	--
Musics track forward	Long press "+" button for 4 seconds	--	--
Musics track backward	Long press "-" button for 4 seconds	--	--
Configure voice prompt language	Double click MFB at pairing mode	English Voice Prompt / 中文語音提示	Flashing purple light 2 times
Enable Voice Prompt	Hold MFB and Volume "+" Button together for 2 seconds under Standby Mode	Short beep 2 times and the alert with Voice Prompt On	--

Function	Button	Alert Tone / Voice Prompt	Status Indicator
Disable Voice Prompt	Hold MFB and Volume "-" Button together for 2 seconds under Standby Mode	Short beep 2 times and the alert with Voice Prompt Off	--
Voice Dialing	Double click "FM button"	Short beep	Blinking purple 2 times
Switch on FM radio	Long press "FM Button" for 2 seconds	FM Mode	--
Switch off FM radio	Long press "FM Button" for 2 seconds	Bluetooth Mode	--

Function	Button	Alert Tone / Voice Prompt	Status Indicator
Scanning a radio station	Hold volume "+" / "-" for 5 seconds (start scanning until a station is found)	Seek-up / Seek-down	--
Assign Preset Station	1. Under FM radio mode, tune to a station that is intended to be stored 2. Hold FM button and MFB together for 2 seconds	Short beep	Blinking purple 2 times
Retrieve Preset Station	Press FM button 2 times to retrieve the first stored station. Press FM button again to retrieve the second stored station and so on.	--	--

- ### Configure Buzzer Alert
- Steps are as follows:
1. Turn off the headset and long press MFB to enter Bluetooth pairing mode.
 2. Long Press Volume "+" Button for 5 seconds. Then the status indicator flashes blue and purple alternatively for 3 times with short beep sound to confirm entering buzzer control mode.
 3. Buzzer Off and 3 different types of buzzer alert patterns pre-demonstrating within 2 minutes. The demonstration order is as follows:
 - Default Buzzer Alert > Buzzer Alert Pattern 1 > Buzzer Alert Pattern 2 > Buzzer Off > Default Buzzer Alert > Buzzer Alert Pattern 1 > ...
 4. Press Volume "+" once to choose the favorite buzzer alert pattern. The status indicator then blinks purple for 2 seconds with a long beep sound to confirm the configuration successfully.
 5. To exit the buzzer control mode, press Volume "-" Button for 2 seconds.

Multi-point

Multi-point allows simultaneous pairing of the headset with 2 mobile phones, to pair 2 mobile phones:

1. pair your headset with the 1st mobile phone as normal and then switch off.
2. repeat the pairing procedure for the 2nd mobile phone 3. re-connect the 1st mobile phone with the headset via the phone menu.

Remarks:
• Turn On/Off multi-point pairing: in the status of standby mode > Press MFB, volume "+" and volume "-" buttons all together for 2 seconds. Voice prompt: "Multi-Point Mode On" or "Multi-Point Mode Off" are returned after configured successfully.
* Please restart to run the setting.

i.Tech Bluetooth headset is designed to work with Bluetooth devices. Due to large variability between different Bluetooth devices from different manufacturers, interoperability between the headset and all Bluetooth-enabled products is not guaranteed.

Safety Information

- Check and observe local laws regarding the use of a mobile phone and a headset while driving. If you use the headset while driving, ensure your full attention and focus. It is your responsibility to drive safely. Consider to pull off the road before making or answering a call.
- Never leave your headset above any car bay deployment area inside your car as serious injury may result when an air bag deploys.
- Never allow children to play with the headset - Small parts may be of choking hazard.
- Observe all signs and displays that require an electrical device or HF radio product to be switched off in designated areas. This includes hospitals, blasting areas, and potentially explosive atmospheres.
- Turn off your headset prior to boarding an aircraft. Do not use your headset inside an aircraft.
- To prevent damage to your hearing, please do not set the listening volume too high.

If the above steps do not solve your problem, please recharge the headset and remove your mobile phone's battery for a while.

i.Tech Dynamic Global Distribution Limited.
All rights in this publication are reserved and no part may be reproduced without the prior written permission of the publisher. The contents of this publication are believed to be correct at the time of going to press, but any information, specifications, products or services mentioned, and product I.D. shown may be modified, supplemented or withdrawn without further notice.

Q: I can't connect my headset with my mobile phone.
A. • Ensure your headset is turned off and is properly charged.
• Ensure the headset is properly paired with your mobile phone.
• Make sure that the mobile phone is connected with the headset - if it does not connect, either refer to the mobile phone's Bluetooth menu or by pressing the MFB once (see "Using Your Headset" and "Pairing Your Headset with a Mobile Phone").

Q: I can't connect my headset with my mobile phone.
A. • Ensure your headset is turned off and is properly charged.
• Ensure the headset is properly paired with your mobile phone.
• Ensure the headset is within ten meters range of your mobile phone and there are no obstructions, such as walls or other electronic devices in between.

- ### Care and Maintenance
- Do not attempt to modify the headset.
 - Do not keep the headset near a wash basin or other wet places.
 - Do not use the headset outdoors in the rain.
 - Do not use the headset in stormy weather.
 - Do not clean the headset while it is being charged.
 - Always disconnect the charger from the headset before cleaning.
 - Do not attempt to force open the built-in battery.
 - Only charge the headset's built-in battery in accordance with the instructions described in this user guide.

Headset

- Turn off your headset before placing it in your pocket or bag. If the MFB is accidentally depressed, your mobile phone may place an unintended call.
- Do not keep to submerge your headset in liquid or try to wash in any circumstance.
- Do not use abrasive cleaners to clean the headset.
- Do not expose the headset to extremely high or low temperatures.
- Do not leave the headset in direct sunlight for an extended period of time.
- Do not leave the headset near open flames such as cooking burners.
- Do not dispose of the headset in a fire, as it will result in explosion.
- Do not bring the headset into contact with any sharp objects, as this will cause scratches and damages.

- Do not stick anything inside the headset, as this may damage internal components.
 - Do not attempt to disassemble the headset as it does not contain serviceable components.
 - If you do not plan to use the headset for a long period, please store it in a dry place that is free from extreme temperatures and dust.
 - Avoid charging the headset in extremely high or low temperatures.
 - Dispose of the battery and the headset according to local regulations. Do not dispose of them as household waste.
- ### Built-in Battery
- Do not attempt to replace the headset's battery as it is in-built and is not changeable.
 - Dispose of the battery according to local regulations. Do not dispose of the battery as household waste.
 - Charge the battery in accordance with the instructions supplied with this user guide.

Charger

- Use only the USB cable supplied by the headset's original manufacturer to charge the headset. Other USB cable may look similar but using them could be dangerous and could damage the headset.
- Do not attempt to disassemble the charger as it may expose you to dangerous voltages or other risks. Incorrect assembly can cause electric shock when the headset is subsequently used.
- Do not use the charger outdoors or in damp areas.

Notes on Environmental Protection

After the implementation of the European Directive 2012/19/EU in the national legal system, the following applies: Electrical and electronic devices must not be disposed of with domestic waste. Consumers are obliged by law to return electrical and electronic devices at the end of their service lives to the public collection points that are set up for this purpose or designated points of sale. However, such details are defined by the national law of the respective country. This symbol on the product, the instruction manual or the packaging indicates that the product is subject to these regulations. By recycling, reusing the materials, or other forms of utilizing old devices, you are making an important contribution in protecting our environment.

Troubleshooting

Q: I can't hear anything in my headset.
A. • Ensure the headset is turned on and is properly charged.
• Ensure the headset is properly paired with the mobile phone.
• Make sure that the mobile phone is connected with the headset - if it does not connect, either refer to the mobile phone's Bluetooth menu or by pressing the MFB once (see "Using Your Headset" and "Pairing Your Headset with a Mobile Phone").

Q: I can't connect my headset with my mobile phone.
A. • Ensure your headset is turned off and is properly charged.
• Ensure the headset is properly paired with your mobile phone.
• Ensure the headset is within ten meters range of your mobile phone and there are no obstructions, such as walls or other electronic devices in between.

If the above steps do not solve your problem, please recharge the headset and remove your mobile phone's battery for a while.

i.Tech Dynamic Global Distribution Limited.
All rights in this publication are reserved and no part may be reproduced without the prior written permission of the publisher. The contents of this publication are believed to be correct at the time of going to press, but any information, specifications, products or services mentioned, and product I.D. shown may be modified, supplemented or withdrawn without further notice.

The Stylized i.Tech logos are trademarks owned by i.Tech Dynamic Global Distribution Limited or its affiliates. All other trademarks or registered trademarks belong to their respective owners.

Bluetooth® and the Bluetooth logos are trademarks owned by Bluetooth SIG, Inc. USA and licensed to i.Tech Dynamic Global Distribution Limited. i.Tech declares under our sole responsibility that the headset is in conformity with the provisions of the following Council Directives: 2014/53/EU

FCC RF Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Federal Communications Commission (FCC) Statement
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

15.21 You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

15.105(b)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

- ### 1. 關於您的 MusicClip 8110
- a. 多功能按鈕 (MFB)**
 - 電源開 / 關
 - 與流動電機配接
 - 接聽 / 結束通話
 - 播放 / 暫停音樂
 - 最後來電重撥
 - b. NFC**
 - c. 狀態指示燈**
 - d. 調高音量(+)**
 - 調較音量
 - 拒接 / 轉駁來電
 - 向上掃描FM電台
 - 上一首音樂

- e. 調低音量 (-)**
 - 調較音量
 - 向下掃描FM電台
 - 下一首音樂
- f. 內建式麥克風**
- g. FM按鈕**
- h. FM電台開 / 關**
 - 指派FM預設電台
 - 擷取FM預設電台
 - 語音撥號
- i. 耳機放大器按鈕**
- j. 3.5毫米音頻插孔**

2. 耳機充電

耳機內置可再充電電池。在第一次使用耳機前，建議先為耳機完全充電。

將充電器插頭插入耳機的USB充電插座，然後將充電器連接至交流電源插座或個人電腦/手提電腦之中。

請僅使用隨附的充電器 / USB充電線，為耳機充電。

耳機狀態	狀態指示燈光
低電量	每分鐘閃爍紅色及「電量低」提示音
充電中	純紅色
完全充電	關閉

需要 2 小時的時間，才能將耳機充滿電量。
* 警告：請勿在耳機連接至充電器時使用耳機。

- ### 3. 將耳機與藍牙行動電話配對
- 1) 確保耳機已關閉。
 - 2) 如果要啟動配對模式，請按住耳機的MFB鍵 8 秒，直至狀態指示燈交替閃爍藍色和紅色。
 - 3) 啟動流動電話的藍牙功能，搜尋藍牙設備，然後選擇 "MusicClip 8110"，並輸入密碼 "0000"。當配對完成後，耳機的狀態指示燈會快速閃爍藍色 3 次，並會聽到「配對成功」的提示音 (語音提示語言設定須選擇為中文)。

4. 利用 NFC 功能連接耳機

透過近距離無線通訊 (NFC)，即可輕易將 MusicClip 8110 連接至兼容的 NFC 設備。

- 1) 啟動設備的 NFC 功能。
- 2) 將 NFC 設備的 NFC 區輕觸耳機的 NFC 標誌。 耳機將自動與設備連接。

如設備不支援 NFC，請以手動模式連接耳機。

- ### 5. 基本操作
- | 功能 | 按鈕 | 嗶聲 / 語音提示 | 狀態指示燈 |
|-----------|-----------|-----------|----------|
| 開機 | 按住MFB約4秒鐘 | 開機 | 藍燈閃爍3次 |
| 關機 | 按住MFB約4秒鐘 | 關機 | 顯示紅燈約2秒鐘 |
| 接聽 / 結束來電 | 按一次MFB | -- | -- |
| 重撥最後號碼 | 連續按MFB鍵2次 | 自動重撥 | -- |

功能	按鈕	嗶聲 / 語音提示	狀態指示燈
音響增加	按音響鍵+一次	--	--
音響減少	按音響鍵-	--	--
下一首音樂	長按音響鍵+	知響聲2次後播放「關閉」語音提示	--
上一首音樂	長按音響鍵-	--	--
設定語音提示語言	配對狀態下連按 MFB 鍵 2 次	English Voice Prompt / 中文語音提示	紫燈閃爍 2 次
開啟語音提示	待機模式下連按 MFB 及音響鍵 + 2 秒鐘	知響聲 2 次後播放「開啟」語音提示	--

功能	按鈕	嗶聲 / 語音提示	狀態指示燈
關閉語音提示	待機模式下連按 MFB 及音響鍵 - 2 秒鐘	知響聲 2 次後播放「關閉」語音提示	--
語音撥號	連續按FM鍵2次	知響聲	--
開啟FM收音機	長按FM鍵2秒鐘	FM電台模式	--
關閉FM收音機	長按FM鍵2秒鐘	藍牙模式	--

設定蜂鳴器提示音

步驟如下:

1. 先關掉耳機及長按 MFB 進入藍牙配對狀態。
2. 長按音響鍵 + 5 秒鐘，便會聽到嗶聲及藍色和紫色狀態指示燈交替閃爍 3 次確定進入蜂鳴器設定模式。
3. 靜音及三種不同的蜂鳴器提示音會在 2 分鐘循環示範，次序如下：
 - 默認蜂鳴器提示音 > 蜂鳴器提示音 1 > 蜂鳴器提示音 2 > 靜音 > 預設蜂鳴器提示音 > 蜂鳴器提示音 1 > ...
4. 如果要從示範中選定蜂鳴器提示音，按音響鍵 + 1 次，藍牙耳機會發出一聲長嗶聲及紫色狀態指示燈會閃爍 2 次以作確定。
5. 成功設定後，按音響鍵 - 2 秒鐘離開。

雙待機多方配接技術

您可同時將兩部流動電話配接。配對程序:

1. 把你的耳機與第一部電話配接，然後關機。
2. 為第二部電話重新配接程序。
3. 使用雙待機功能表，把第一部電話與耳機重新配接。

註：
關閉/關斷多點連接配對：在待機模式下同時按下MFB、音響+及音響-按鍵2秒鐘，設定成功後便會聽到「關斷多點連接」或「關斷多點連接」的提示音。

請重新開機。
i.Tech藍牙耳機是專門設計與藍牙裝置搭配使用。由於不同製造商提供種類繁多的藍牙裝置，因此無法完全保證耳機與與該類藍牙的產品之間能互通。

駕駛時請先查閱當地有無使用手提電話及耳機的法例。使用本耳機時，必須保持集中，注意路面情況。為閣下安全著想，請小心駕駛。可考慮先將車輛停泊于路旁，再撥打或接聽電話。

- 切勿在本耳機放在車內安全氣袋的位置上，因為當安全氣袋彈出時，可能會引起嚴重的傷害。
- 切勿讓兒童玩耍本耳機，細小的零件可能令兒童有窒息之危險。
- 醫院、爆破地點或潛在爆炸環境的地方，可能會要求用戶关掉電子器材及無線電裝置。當進入特定範圍內時請留意有關指示。
- 登機前請先把手機關掉，在飛機內不可使用本耳機。
- 為閣下聆聽著想，請勿把音量調得太。

FCC RF輻射暴露聲明

本器材符合在不受控制環境下的FCC輻射暴露限制。最終用戶必須跟從特定的操作指引以符合相關的條款。傳送器不能與任何天線或發射器共同置。

聯邦通訊委員會(FCC) 聲明
所有在本器材的資料均有版權，沒有印刷的書面同意，不得作出任何翻印。在印刷前，所有在本器材的內容均屬真實正確，但任何資料、規格、產品或提供的服務，以及相關的產品ID可能修改、補充或錯誤而事先通知。時時的i.Tech標誌是愛達克環球有限公司或其相關公司擁有的商標。所有其他商標或註冊商標屬於相關的擁有者。
Bluetooth®和藍牙標誌是屬於Bluetooth SIG, Inc. USA商標的商標授權予i.Tech Dynamic Global Distribution Limited. © 2014/53/EU
i.Tech聲明其共同之責任下，本器材是符合下列委員會指令的條款：
2014/53/EU

安全指引

• 切勿試圖對本耳機作出任何修改。
• 切勿把本耳機放置在洗手盆或其他潮濕的地方。
• 切勿在雨中使用本耳機。
• 切勿在颱風時使用本耳機。
• 當處於充電狀態時，請勿清潔本耳機。應先把耳機及充電電分開，再進行清理。
• 切勿強行打開本耳機的內置電池。
• 請依照本說明書上的方法，進行內置電池的充電。

- ### 護理及保養
- 避免在溫度過高或過低的地方為耳機充電。
 - 請根據地方法規棄置電池和耳機。不要將它當作家居廢物般棄置。
- ### 內置電池
- 切勿嘗試更換耳機的電池，因為它是內置的，且不能更換。
 - 請根據地方法規棄置電池。不要將它當作家居廢物般棄置。
 - 請根據本用戶指南附有的指示替電池充電。
- ### 充電器
- 請僅使用耳機製造商提供的原廠充電器，使用其他品牌的充電器可能會損毀耳機，甚至構成危險。
 - 由於在拆解充電器時可能會接觸到高低電流或構成其他危險，請勿嘗試拆解充電器。使用不正確組裝的充電器會引致觸電危險。
 - 請勿在戶外或潮濕地方使用充電器。

有關環保注意事項

自從在國家法律體系中實施歐盟指令2012/19/EU後，以下措施開始應用：電器及電子產品不能作一般家居廢物處理。如在電器產品壽命終結時，消費者將根據法例規定，將產品棄于特定的公共收集點或銷售點作回收用途，但絕不應由相關國家的國家法律所定義。產品、說明書或包裝上的標誌，說明這類產品是受到這些法例的規定，循環使用或用這些物料或使用其它形式的器材，將對環境保護有重大貢獻。

疑難排解

問：我的耳機沒有聲音。
答：• 請確保耳機已啟動並完全充電。
• 請確保耳機與流動電話妥善配接。
• 請確保耳機與流動電話妥當地連接 - 如未能連接，請參照流動電話的藍牙菜單，或按MFB一次。
(請參閱「使用耳機」及「將耳機與流動電話配接」一節)。

問：我不能把耳機與流動電話連接。
答：• 請確保耳機已啟動並完全充電。
• 請確保耳機與流動電話妥善配接。
• 請確保流動電話的藍牙裝置已被啟用。詳細操作說明請參考流動電話用戶使用說明。
• 請確保耳機位於流動電話的10米範圍之內，而當中並沒有任何障礙物，例如牆壁或其他電子器材等。

如何以上步驟未能解決問題，請重新把耳機充電並把電池從手機取出會。

愛達克環球有限公司
所有在本器材的資料均有版權，沒有印刷的書面同意，不得作出任何翻印。在印刷前，所有在本器材的內容均屬真實正確，但任何資料、規格、產品或提供的服務，以及相關的產品ID可能修改、補充或錯誤而事先通知。時時的i.Tech標誌是愛達克環球有限公司或其相關公司擁有的商標。所有其他商標或註冊商標屬於相關的擁有者。
Bluetooth®和藍牙標誌是屬於Bluetooth SIG, Inc. USA商標的商標授權予i.Tech Dynamic Global Distribution Limited. © 2014/53/EU
i.Tech聲明其共同之責任下，本器材是符合下列委員會指令的條款：
2014/53/EU

如以上步驟未能解決問題，請重新把耳機充電並把電池從手機取出會。

愛達克環球有限公司
所有在本器材的資料均有版權，沒有印刷的書面同意，不得作出任何翻印。在印刷前，所有在本器材的內容均屬真實正確，但任何資料、規格、產品或提供的服務，以及相關的產品ID可能修改、補充或錯誤而事先通知。時時的i.Tech標誌是愛達克環球有限公司或其相關公司擁有的商標。所有其他商標或註冊商標屬於相關的擁有者。
Bluetooth®和藍牙標誌是屬於Bluetooth SIG, Inc. USA商標的商標授權予i.Tech Dynamic Global Distribution Limited. © 2014/53/EU
i.Tech聲明其共同之責任下，本器材是符合下列委員會指令的條款：
2014/53/EU

FCC RF輻射暴露聲明

本器材符合在不受控制環境下的FCC輻射暴露限制。最終用戶必須跟從特定的操作指引以符合相關的條款。傳送器不能與任何天線或發射器共同置。

聯邦通訊委員會(FCC) 聲明
所有在本器材的資料均有版權，沒有印刷的書面同意，不得作出任何翻印。在印刷前，所有在本器材的內容均屬真實正確，但任何資料、規格、產品或提供的服務，以及相關的產品ID可能修改、補充或錯誤而事先通知。時時的i.Tech標誌是愛達克環球有限公司或其相關公司擁有的商標。所有其他商標或註冊商標屬於相關的擁有者。
Bluetooth®和藍牙標誌是屬於Bluetooth SIG, Inc. USA商標的商標授權予i.Tech Dynamic Global Distribution Limited. © 2014/53/EU
i.Tech聲明其共同之責任下，本器材是符合下列委員會指令的條款：
2014/53/EU

• 切勿試圖對本耳機作出任何修改。
• 切勿把本耳機放置在洗手盆或其它潮濕的地方。
• 切勿在雨中使用本耳機。
• 切勿在颱風時使用本耳機。
• 當處於充電狀態時，請勿清潔本耳機。應先把耳機及充電電分開，再進行清理。
• 切勿強行打開本耳機的內置電池。
• 請依照本說明書上的方法，進行內置電池的充電。

1. 關於您的 MusicClip 8110

- a. 多功能按鈕 (MFB)**
 - 電源開 / 關
 - 與流動電機配接
 - 接聽 / 結束通話
 - 播放 / 暫停音樂
 - 最後來電重撥
- b. NFC**
- c. 狀態指示燈**
- d. 調高音量(+)**
 - 調較音量
 - 拒接 / 轉駁來電
 - 向上掃描FM電台
 - 上一首音樂

功能	按鈕	嗶聲 / 語音提示	狀態指示燈
音響增加	按音響鍵+一次	--	--
音響減少	按音響鍵-	--	--
下一首音樂	長按音響鍵+	知響聲2次後播放「關閉」語音提示	--
上一首音樂	長按音響鍵-	--	--
設定語音提示語言	配對狀態下連按 MFB 鍵 2 次	English Voice Prompt / 中文語音提示	紫燈閃爍 2 次
開啟語音提示	待機模式下連按 MFB 及音響鍵 + 2 秒鐘	知響聲 2 次後播放「開啟」語音提示	--

2. 耳機充電

耳機附內建式充電電池。第一次使用耳機之前，建議您將電池充電。

將充電器的插頭插入 USB 充電插槽，並將主充電器插入 AC 牆壁插座或插入個人電腦 / 筆記型計算機。

請僅使用隨附的充電器 / USB充電線，為耳機充電。

耳機狀態	狀態指示燈光
低電量	閃紅色，而且每分鐘發出「電量低」提示音
充電中	紅光
已充滿電	關閉

需要 2 小時的時間，才能將耳機充滿電量。
* 警告：請勿在耳機連接至充電器時使用耳機。

- ### 3. 將耳機與藍牙行動電話配對
- 1) 確保耳機關閉。
 - 2) 如果要啟動配對模式，請按住耳機的 MFB 按鈕 8 秒鐘，直至狀態指示燈交替閃爍藍色和紅光。
 - 3) 啟動手機的藍牙功能，搜尋藍牙裝置，選擇 "MusicClip 8110"，然後輸入密碼 "0000"。
- 當配對完成時，耳機的狀態指示燈會快速閃爍藍色 3 次，並會聽到「配對成功」的提示音 (語音提示語言設定須選擇為中文)。

4. 用 NFC 配對連接耳機